


Installation Instruction

Smart Sensor Switch
Single Pole

ELEGRP


PRODUCT INTRODUCTION

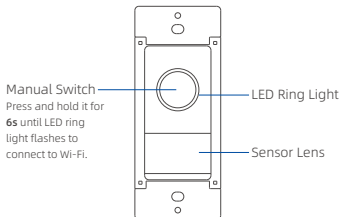


LED RING LIGHT STATUS

White	Auto Mode (Sensors are activated) The switch will be either auto-on when a human is detected or auto-off when the space is vacant.
Blue	Manual Mode (Sensors are disabled) The switch could only be manually switched on and off.
Green	Testing Sensors
Flashing White	Connecting to Wi-Fi
Orange	Disconnected from Wi-Fi

 WHAT'S IN THE BOX



Smart Switch

 

Face Plate



Fixing Plate



2 x Wall Plate Screws

2 x Mounting Screws



Wire Labels



Wire Connectors

 
TOOLS NEEDED



Flat-Head
Screwdriver



Philips
Screwdriver



Wire Strippers
(recommended)



Test Pencil
(recommended)

CHECK COMPATIBILITY

Compatible Bulb Types



LED



CFL



Incandescent



Halogen

Max Load for Each Bulb Type

Bulb Type	LED / CFL	INC / HAL
Max Load	150W	450W

Rating: 120VAC, 60Hz

Operating Temperature: 0°C~40°C (32°F~104°F)

Storage Temperature: -40°C~60°C (-40°F~140°F)

Wiring Type: Single Pole

Type of Action: Type 1.Y Action

Protection Level: Type I Insulation



The white neutral wire is required to connect. The device will not function if the neutral wire is not connected.

BEFORE WE START



⚠️ WARNINGS: To avoid fire, shock, or death, **turn off power at circuit breaker or fuse** and test that the power is off before wiring!

⚠️ CAUTIONS: To reduce the risk of overheating and possible damage to other equipment, **DO NOT** install to control a receptacle, a motor operated appliance, a fluorescent lighting fixture, or a transformer-supplied appliance.


⚠️ AVERTISSEMENTS: Pour éviter le feu, les chocs ou la mort, **éteignez le disjoncteur ou le fusible** et vérifiez que l'alimentation est coupée avant le câblage!

⚠️ ATTENTIONS: Pour réduire le risque de surchauffe et d'endommagement possible d'autres équipements, **NE PAS** installer pour contrôler une prise, un appareil actionné par moteur, un appareil d'éclairage fluorescent ou un appareil alimenté par un transformateur.



Consult a qualified electrician if you are unfamiliar with electrical codes and regulations, or are uncomfortable performing the installation.

REMOVE OLD SWITCH

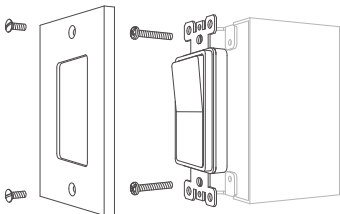


After power is turned off, remove wall plate and switch mounting screws. Carefully pull out the old switch from the wall box (do not remove wires).



Turn Off Power

Before removing, turn off power at circuit breaker or fuse and use a test pencil to confirm whether power is off before wiring or servicing fixture!

IDENTIFY & LABEL WIRES

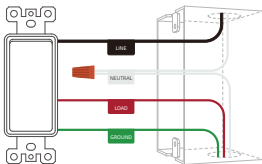

Wire Label	Line	Load	Neutral	Ground
Wire Color	Black	Red or Black	White	Green or Bare Copper

STEP 1: Identify and Label Neutral & Ground

Neutral wires are usually white and Ground wires are usually green / bare copper.

STEP 2: Identify and Label Line & Load

Turn on power and test the remaining wires with a test pencil. When the test pencil glows, then that wire is line wire, but when the pencil does not glow at all, then that is load wire.

Turn off the power at the circuit breaker before labelling the wires.



Be Safe

To prevent severe shock or electrocution, make sure your fingers **do not touch** the wall box, wires or the screw terminals when power is restored!


STRIP WIRES




Disconnect wires from the switches, make sure that the ends of the wires from the wall box are straight (cut if necessary).

Remove 0.6" (15mm) of insulation from each wire in the wall box.

CONNECT SWITCH

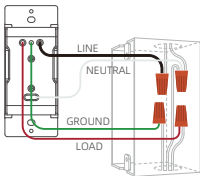


Match every wire as labeled

 

Screw on clockwise


Use provided wire connectors to connect wires in the wall box to the wires of the smart switch.

FINISH WIRING

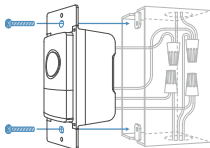

Form all wires carefully into wall box, and mount switch with mounting screws supplied.

MOUNT WALL PLATE

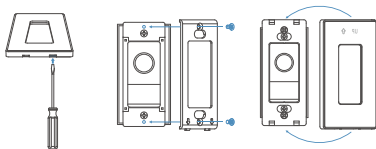

Push a flat-head screwdriver into the slot at the bottom of the faceplate. Gently pry apart the two pieces.


Use the short screws to mount the fixing plate.

Push faceplate onto the fixing plate and snap it into place.

COVERAGE PATTERNS

In open space, the sensor detects motion in areas up to 600 sq. ft. and up to 26.2 feet from the sensor. Ideally, the Fresnel lens on the sensor is a multiple segment viewing lens with a field of view of 120°. The sensor must have a clear view of the people in the space in order to detect occupancy. Obstructions, such as furniture blocking the sensor's lens, may prevent occupancy detection.

It is recommended to install the smart device at a height between 1.2m to 1.5m for optimal performance.

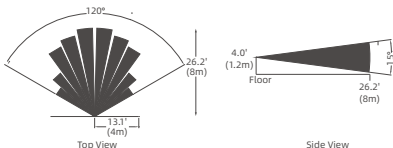

TROUBLESHOOTING

After installation, the switch does not turn on?

- Check that the bulb is properly installed and has not failed.
- Check if the circuit breaker or fuse is connected properly.
- Try swapping your Line and Load wires.

Difficulty in connecting smart switch to a WiFi network?

- Make sure the WiFi network is a 2.4 GHz network.
- The WiFi connection may not have good coverage. Try moving your WiFi router closer to the smart switch.



Refer to help center in the app for additional troubleshooting suggestions

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This product must be installed and operated with a minimum distance of 20 cm between the radiator and user body. Contains Transmitter Module FCC ID: 2ANDL-CB2S.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ISED CANADA COMPLIANCE STATEMENT

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RADIATION EXPOSURE STATEMENT

This equipment complies with RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements CNR-102 établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

CAN RSS-247/CNR-247

ONE YEAR LIMITED WARRANTY

The warranty gives you specific rights and you may also have other rights, which vary in different states and countries. Our company warrants to the original consumer purchaser that this product is free of defects in materials and workmanship for 1 year from the purchase date. **This warranty does not cover labor for removal or reinstallation of the product and is void on any product installed improperly or in an improper environment, overloaded, misused, opened, abused, or altered in any manner.** Our company excludes incidental or consequential damages for breach of any warranty on this product. Some jurisdictions may not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

HAVING PROBLEMS? WE CAN HELP!

Email: support@elegroup.com

Call us on: 866-267-3272 Mon-Fri 9:00-17:00 EST (US)

Feel free to contact us with any questions or concerns.
Our customer service team will work hard to put a smile
back on your face.

About Us

Website: www.elegrp.com

Search **ELEGRP** on social media